MODEL: 93089

PACKING DIAGRAM

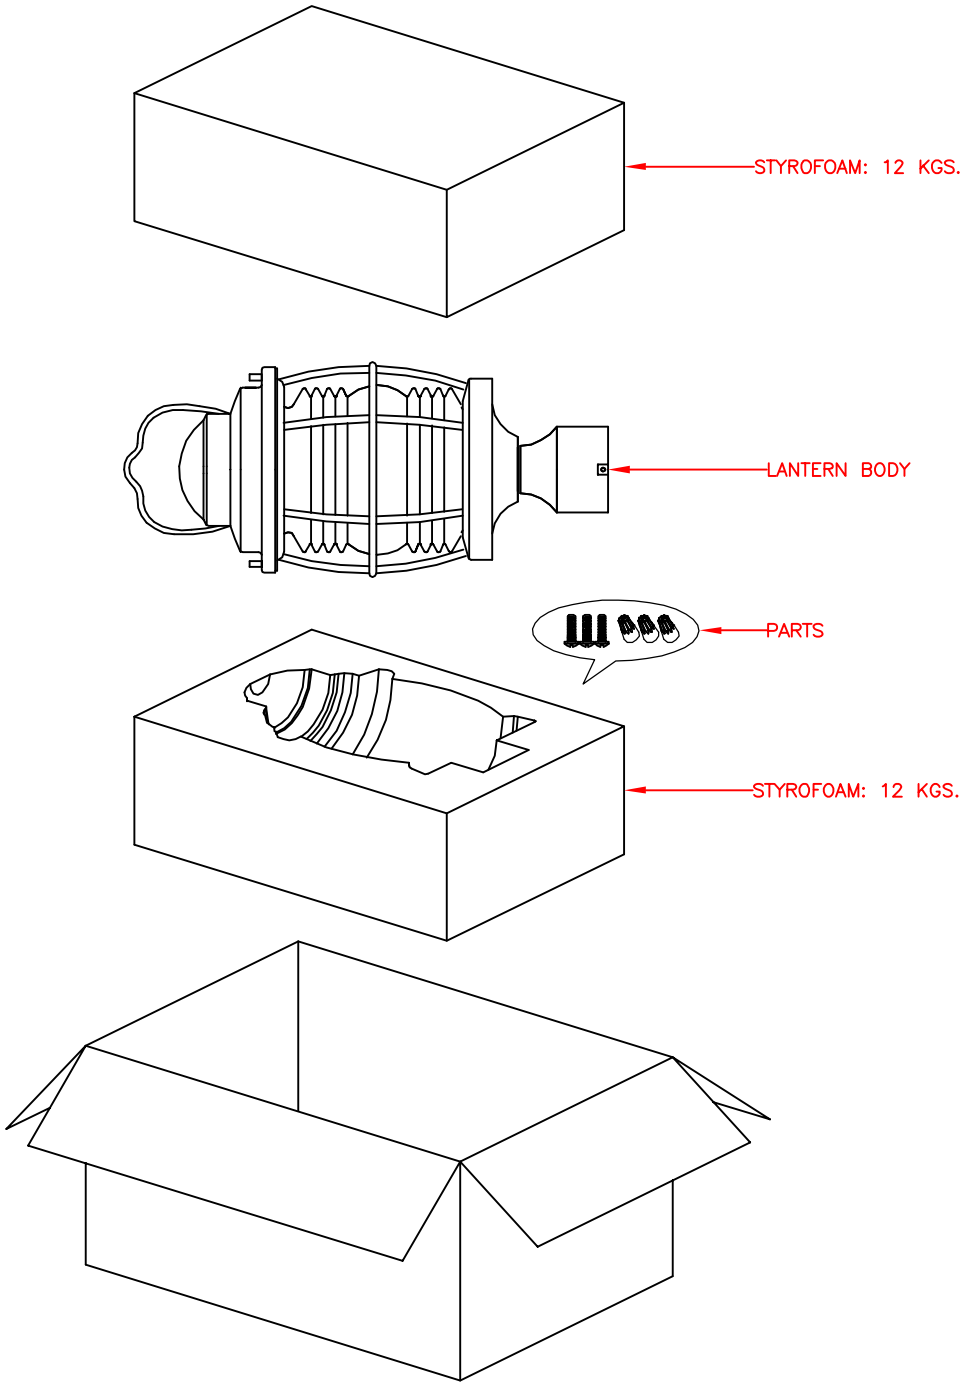

AVAILABLE PART IS:
93087GS (GLASS SHADE)

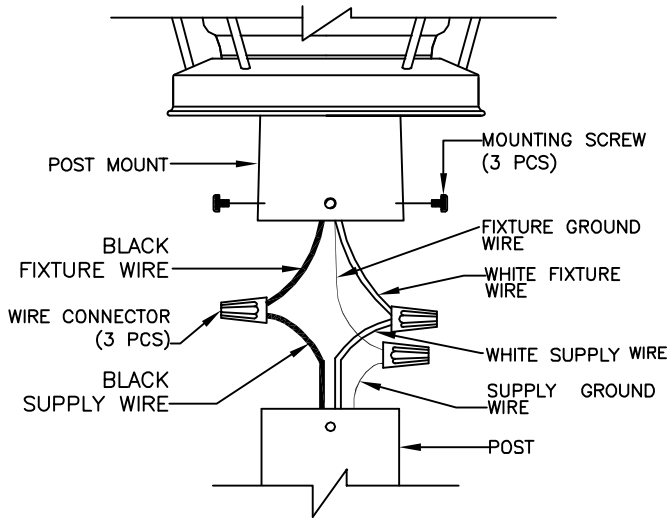

WIRING DIAGRAM

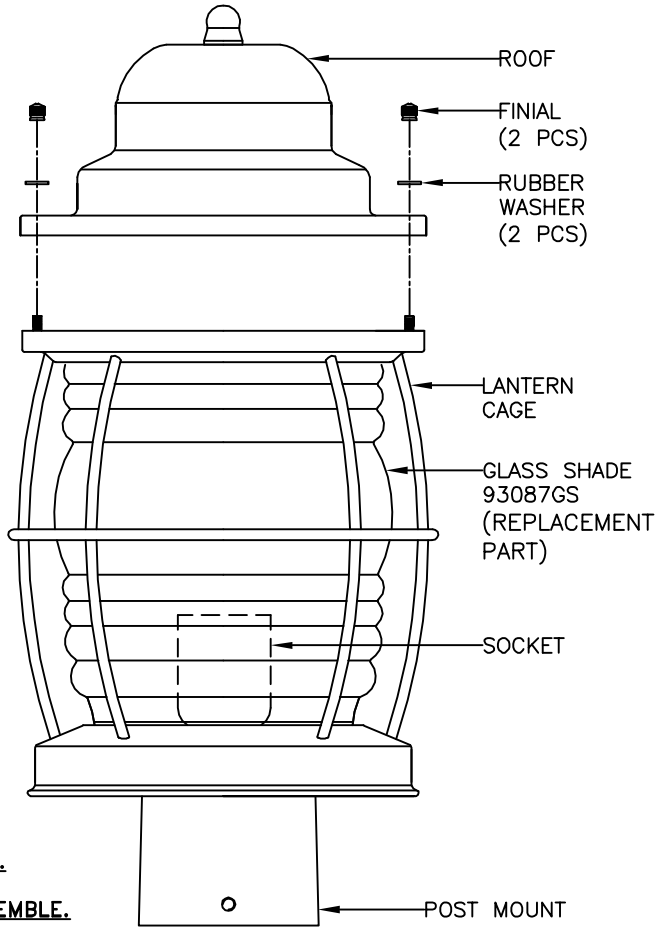

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS LANTERN SHOULD TAKE APPROXIMATELY 5 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

CAUTION: TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRSTLY, TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.
** IF YOU DO NOT HAVE ELECTRICAL WIRING EXPERIENCE, HAVE YOUR LANTERN INSTALLED BY A QUALIFIED LICENSED ELECTRICIAN.
*** THIS LANTERN IS TO BE MOUNTED TO A UL LISTED POST CAPABLE OF SUPPORTING THE WEIGHT OF THE LANTERN.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: LADDER, SCREWDRIVER.

UNPACK THE LANTERN: YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: LANTERN BODY, (3) MOUNTING SCREWS AND (3) WIRE CONNECTORS. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

INSTALLING THE LANTERN

1. REMOVE THE ROOF FROM LANTER CAGE BY UNSCREWING (2) FINIALS.

2. INSTALL A 100 WATT MAXIMUM MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

3. REPLACE THE ROOF TO TOP OF THE LANTERN CAGE, THEN SECURE WITH (2) RUBBER WASHERS AND (2) FINIALS REMOVED ABOVE.

4. RAISE THE LANTERN BODY UP TO POST FOR WIRING. ATTACH THE WHITE OR RIBBED LANTERN WIRE TO THE WHITE SUPPLY WIRE USING A WIRE CONNECTOR. ATTACH THE BLACK OR SMOOTH LANTERN WIRE TO THE BLACK SUPPLY WIRE WITH A WIRE CONNECTOR. ATTACH THE LANTERN AND SUPPLY GROUND WIRES TOGETHER AND SECURE WITH A WIRE CONNECTOR.

5. PLACE THE LANTERN BODY ON POST AND ALIGN HOLES, THEN SECURE WITH (3) MOUNTING SCREWS.

6. RESTORE POWER. YOUR LANTERN IS NOW READY FOR USE.